


130715

2007-2017 JEEP JK STEP KIT

**OFF CAMBER
FABRICATIONS**

by: **MBRP** INC.

1. STEP
2. FLAT WASHER [4 PCS]
3. 3/8"x1" HEX BOLT [4PCS]
4. ANTISKID TAPE

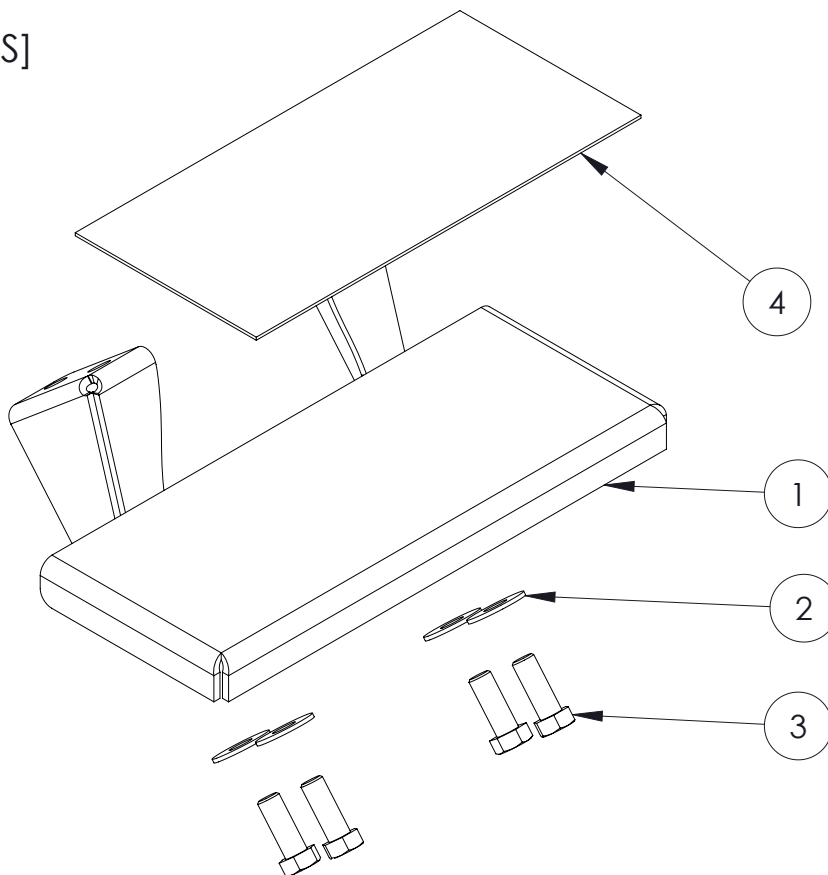

INSTALLATION

1. Install Anti Skid Tape onto Step
2. Install the top 2 fasteners first, followed by the bottom 2. this is required due to tight wrenching clearances.
3. Removal is the opposite of installation.

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that this component is of superior quality and securely packaged, it is the installers responsibility to ensure the following before starting:

- that the component is undamaged.
- That the component is appropriate for the year, make and model of vehicle it is to be installed to;
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this component on your vehicle please contact your dealer before commencing installation.