


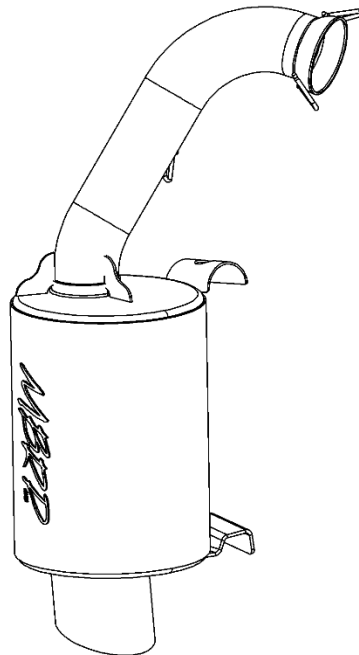

### **MBRP Muffler Installation Instructions**

**429T210      2015 Polaris 800/600 Rush Pro-S**

1. Remove the side panel to access the stock muffler.
2. Remove the two springs attaching the muffler to the tuned exhaust pipe (set springs safely aside so they can be reused).
3. Remove the spring further up the tuned exhaust pipe to allow the pipe to move freely.
4. Remove the spring on the backside of the stock muffler.
5. Remove the stock muffler from the belly pan. Be careful not to damage the gasket at the muffler inlet.
6. Remove the rubber bushing from the upper bracket of the stock muffler and transfer it onto the MBRP muffler.
7. Install the MBRP muffler in the same location as the original muffler and re-attach all springs to the spring tabs.



**CAUTION: DO NOT touch muffler while snowmobile is running or shortly after it has run, as it may result in personal injury.**

MBRP Inc warranty applies for a one (1) year period from the date of purchase to defects in product material and workmanship and is to the original purchaser on record and for the original vehicle for which it was designed and installed. This warranty is limited, at MBRP Inc.'s sole determination, to the repair or replacement of defective product only and does not include the cost of removal or re-installation, damage by accident, abuse, misuse or misapplication or any consequential damages however they may arise. Determination of warranty coverage shall be at the discretion of an authorized MBRP Inc quality engineer.