
AT-8513P

PERFORMACE MUFFLER- SLIP-ON SYSTEM RZR XP 900 2011-2013 RZR 4 XP 900 2012-2013 RZR 900 2014 RZR 4 900 2014



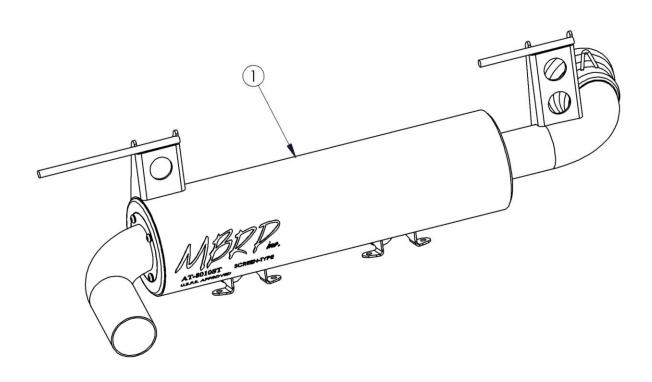

1. MUFFLER ASSEMBLY

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

AT-8513P © 06/16 PAGE 1 OF 2



Removal of Stock Exhaust:

- 1. Remove the springs securing the muffler inlet to the exhaust pipe. Do not discard the springs.
- 2. Remove the springs attached to the support bracket on the bottom of the muffler. Do not discard the springs.
- 3. Remove the muffler (and heat shield) by sliding the hangers out of the rubber insulators.

Installation of MBRP Inc. Exhaust:

- 1. Slide the **Muffler** hangers into the rubber insulators on the bike.
- 2. Position the **Muffler** inlet onto the end of the exhaust pipe and secure it using the springs previously removed.
- 3. Ensure that the lower muffler support brackets are sitting in the correct position and then re-install the two springs that were removed from the stock muffler.

Congratulations! You are ready to begin experiencing the improved performance and driving excitement of your MBRP Inc. ATV Exhaust upgrade. We know you will enjoy your purchase.

AT-8513 © 06/16 PAGE 2 OF 2