


FGS017/CFGS018
2015 UP MUSTANG ECOBOOST
DOWNPIPE KIT



FGS017: Tuning **MAY BE REQUIRED**
to eliminate MIL light.

CFGS018: Tuning **IS REQUIRED.**

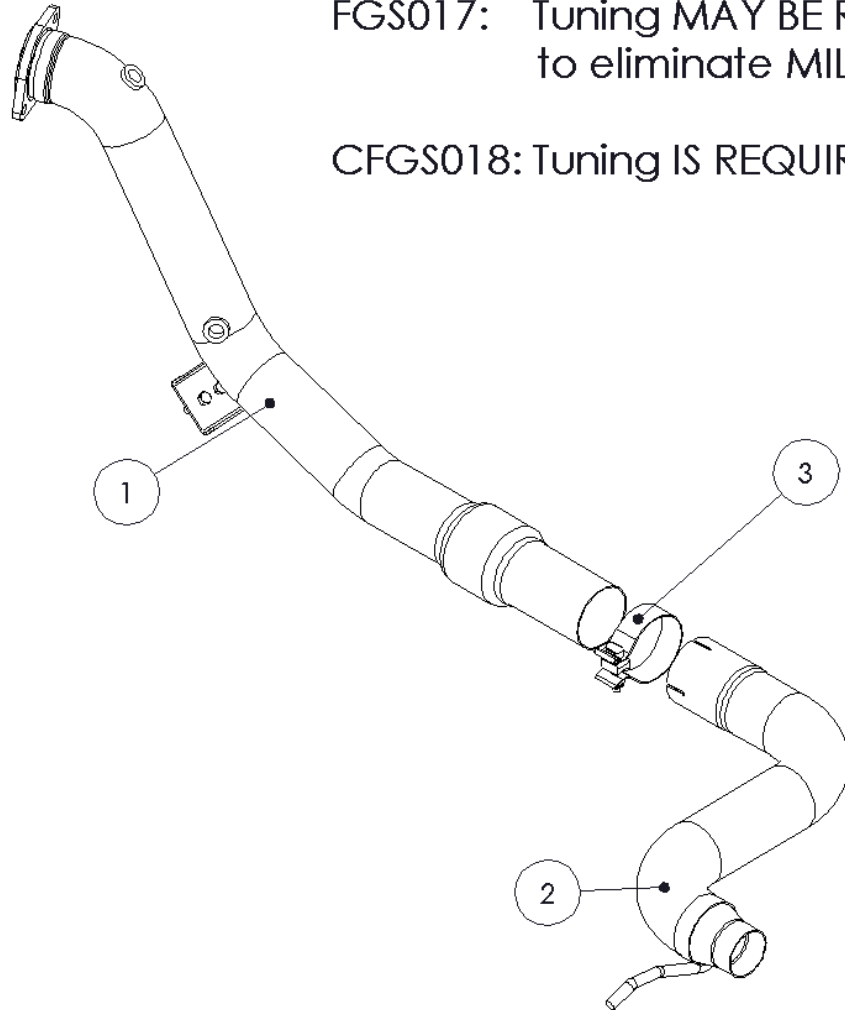

1. DOWN PIPE
2. EXTENSION PIPE
3. 3" CLAMP

PLEASE READ BEFORE STARTING INSTALATION

While MBRP inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

Removal of Stock Down Pipe:



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6

1. Disconnect the upper and lower O2 Sensor wiring.
Refer to Figures 1 and 2.

2. Remove the 2 nuts and hardware from the mounting bracket. Set these aside as they will be reused. Loosen the mounting bracket bolts at the transmission but do not remove.

Refer to Figure 3.

3. Loosen the OEM band clamp at the down pipe outlet and slide the cat back exhaust rearward to disengage. Remove the rear hanger from the rubber isolator.

4. Remove the 2 nuts at the turbo outlet flange and carefully remove the down pipe assembly. Do not damage the gasket as it will be reused.

Installation of MBRP Inc Down Pipe

1. Transfer the O2 sensors from the stock downpipe to the MBRP **Down Pipe**.

2. Install the **Down Pipe** being sure the gasket is properly seated in the turbo outlet. Loosely re-install the 2 nuts at the turbo flange.

Refer to Figure 4.

3. Install a **3" Clamp** over the inlet of the **Extension Pipe** before installing it onto the outlet of the **Down Pipe**, then install the hanger into the rubber isolator.

Refer to Figure 5.

4. Slide the cat back exhaust forward to engage the OEM band clamp onto the outlet of the **Extension Pipe**. Adjust and align both the **Down Pipe** and the **Extension Pipe** while tightening the **3" Clamp**, and the OEM band clamp.

5. With the exhaust clamps secure, tighten both nuts at the turbo flange.

6. Re-install the mounting bracket hardware and align the bracket on the transmission to properly support the **Down Pipe**. Once aligned, tighten all hardware
Refer to Figure 6.

7. Re-connect the O2 sensor wiring.

8. Check along the entire length of the exhaust system to ensure that there is adequate clearance between the exhaust system and heat shields, cross members, and body panels.

Congratulations! You are ready to begin experiencing the improved power, sound and driving experience of your *MBRP Inc.* performance exhaust system. We know you will enjoy your purchase.