


HS0001

**07-08 SOLSTICE GXP TURBO HEAT SHIELD
KIT**

MBRP
INC.

PERFORMANCE EXHAUST

1. HEAT SHIELD
2. M6 BOLT [3 PCS]
3. M6 WASHER [3PCS]

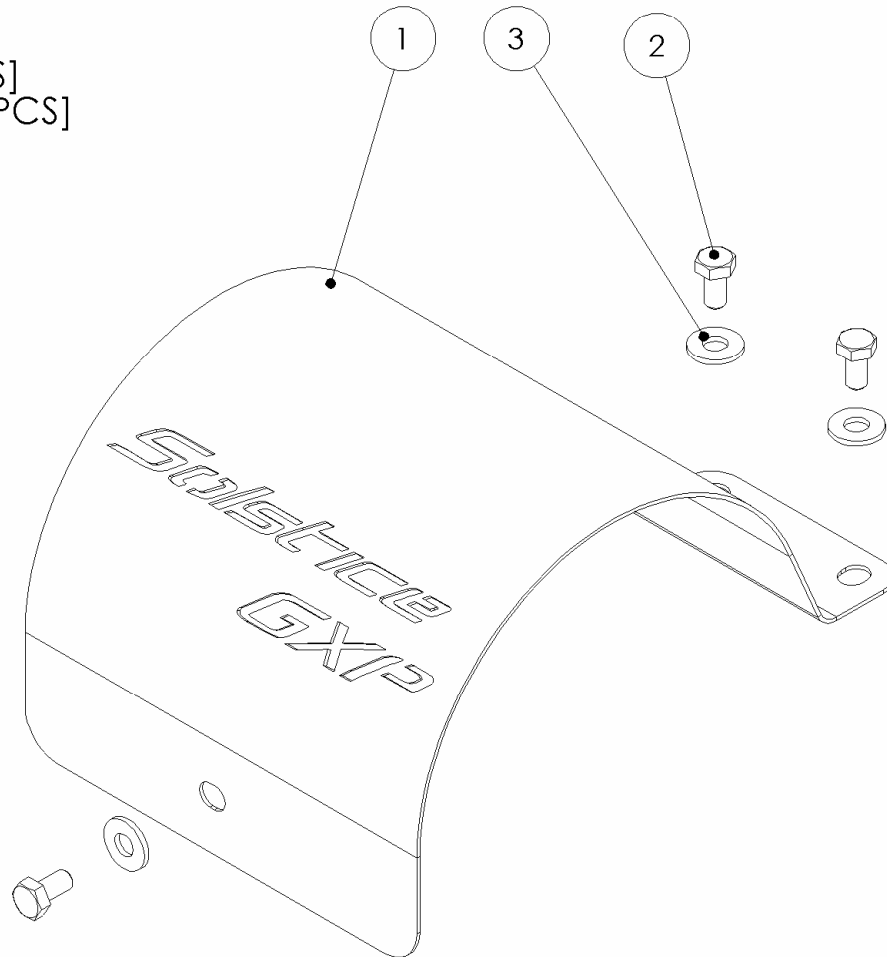

PLEASE READ BEFORE STARTING INSTALATION

While MBRP Inc. has made every effort to ensure that all components of this kit are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the kit you have purchased is appropriate for your vehicle year, model and configuration.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this kit to your vehicle please contact MBRPinc. before commencing installation.



PERFORMANCE EXHAUST

2007-2008 Pontiac Solstice GXP Turbo Heat Shield Kit

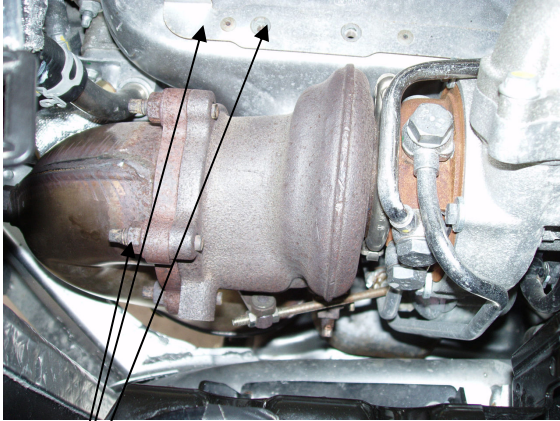


Figure 1

STOCK MOUNTING POINTS

1. Allow the engine to completely cool. Remove the 3 M6 bolts holding the stock cover in place and remove the cover.

2. Place the MBRP Turbo cover in position and install the one fastener in through the shield to the turbo, then install the other 2 fasteners into the holes in the manifold shield. **Refer to Figure 1.**

3. be sure to clean the shield before running the engine. Fingerprints can burn into the stainless when heated.

