


JS9001

CLEARANCE ADAPTOR for 2012 JEEP Y-PIPE

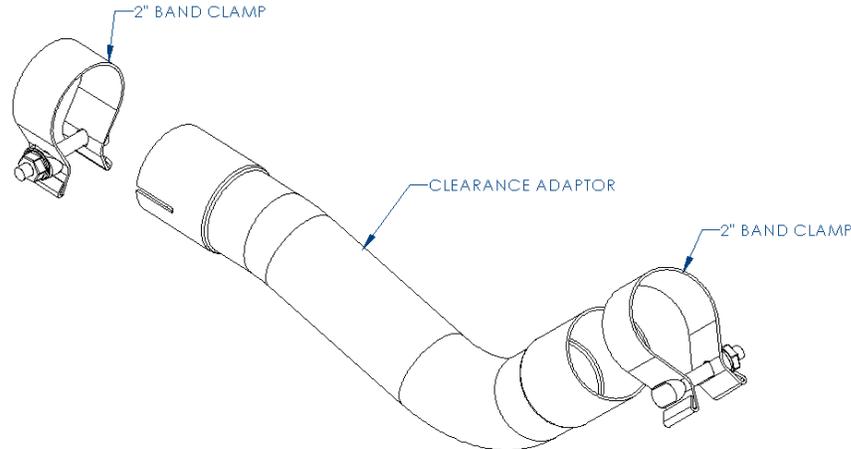

02 November, 2012



PLEASE READ BEFORE STARTING INSTALLATION

MBRP Inc. has made every effort to ensure that this component is of superior quality and properly packaged. It is the installer's responsibility to ensure that the component is complete, including any additional hardware and that it is undamaged. This should be done prior to the removal of factory components. Finally, check that this system properly matches the make and model of the vehicle and will not interfere with previous or planned modifications.



Figure 1

Modification to Stock System:

Note: This **Clearance Adaptor** is intended to be used on a lifted vehicle to give the front axle more clearance.

1. Locate the passenger side section of the Y-Pipe just before it joins the driver's side pipe. Using the **Clearance Adaptor** as a guide mark where the ends of the pipe will be located. Measure 2" inward to allow for the existing pipe to go into the expanded area of the pipe. **Refer to Figure 1.**

2. Remove the heat shield where necessary. Reuse the Y-Pipe Drop Section to check the location of the cuts. Ensure they will fit well inside the expanded area of the **Clearance Adaptor** pipe. Cut and remove the section of pipe. De-burr the stock pipe after cutting.



Figure 2

Installation

1. Install the **Clearance Adaptor** using the **2" Band Clamps** provided. Tighten clamps in place. A tack weld is recommended to keep the **Clearance Adaptor** slipping on the stock pipe. **Refer to Figure 2.**