


POWER TUBE

MBRP
INC.
PERFORMANCE EXHAUST

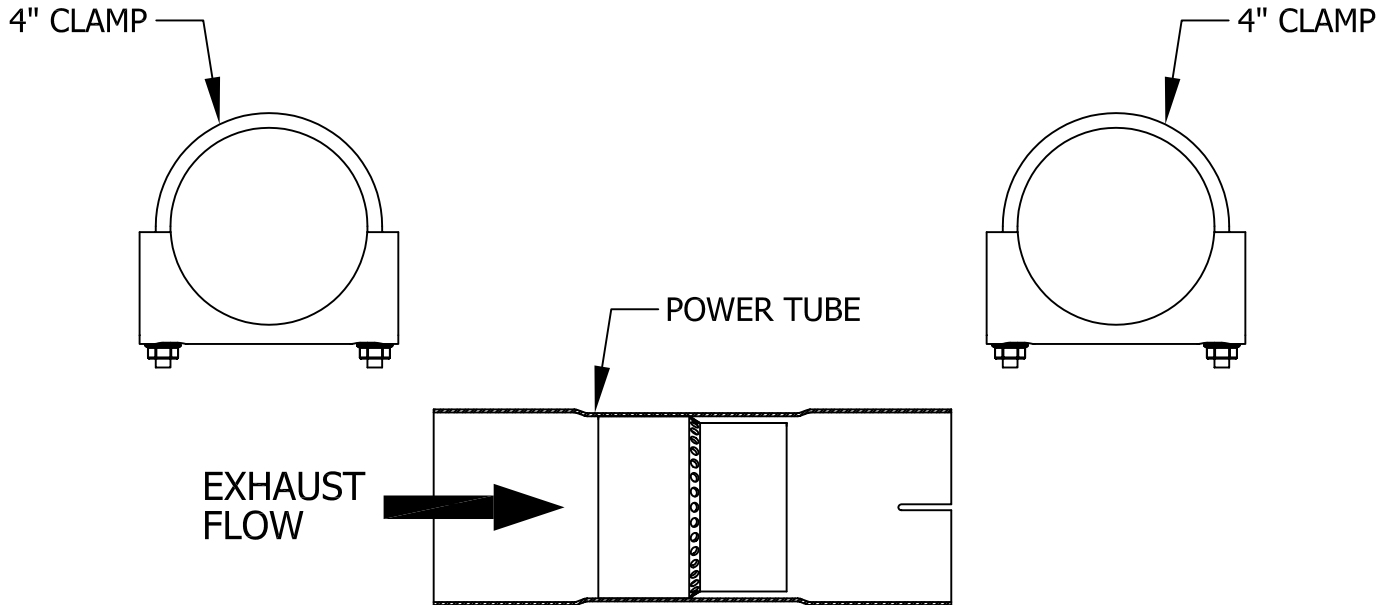

1. Inspect 4" exhaust system to find suitable place to splice in the MBRP Inc. Power Tube as close to the turbo outlet as possible. Make sure that there is sufficient room for clamps.
2. Remove 5.5" from the exhaust pipe at the location you have decided the Power Tube will fit best.
3. Install the Power Tube and clamps provided. Make sure the exhaust is lined up and there is adequate clearance.

Congratulations! You are now ready to begin enjoying the improved performance and driving experience of the MBRP Inc. Power Tube. We hope you enjoy your purchase.