

FORD FOCUS

Installation Instructions

Thank you for purchasing this MBRP Inc. Performance Exhaust Product. If technical assistance is required, please call our staff : Toll Free 1-888-636-7223

Hardware Included:

- 2pcs. - FX345 Gasket
- 6pcs. - 7/16" Flat Washer
- 4pcs. - 7/16" x 1 1/2" Bolt
- 4pcs. - 7/16" Nuts
- 4pcs. - 7/16" Lock Washer
- 4pcs. - 7/16" Nuts
- 1pc. - 2 1/4" Clamp
- 1pc. - Rubber Hanger w/hardware
- 3pcs. - Exhaust System



Removal of stock system ;

Removal may require cutting the pipe just behind the first muffler before the axle.

Remove the exhaust from the front flange and carefully remove it from the rubber hangers.

Remove from vehicle

Installation of MBRP Inc. - 3 piece Stainless Steel Focus System ;


Using fasteners and gaskets supplied, attach the resonator assembly to the front flange and rubber hangers.

Install the muffler assembly into the OEM hanger and over the resonator section using the clamp supplied at the slip joint, (DO NOT tighten clamp until all components are installed and in place.)

Install the tailpipe from the rear of the vehicle, over the axle section of the car. Attach the rubber hanger (supplied) to existing vehicle hold down bracket mounted to the frame, using gaskets and fasteners supplied, bolt the flanges together.

After the system is correctly positioned under the vehicle, starting at the front tight all connections ensuring proper alignment.

FORD FOCUS

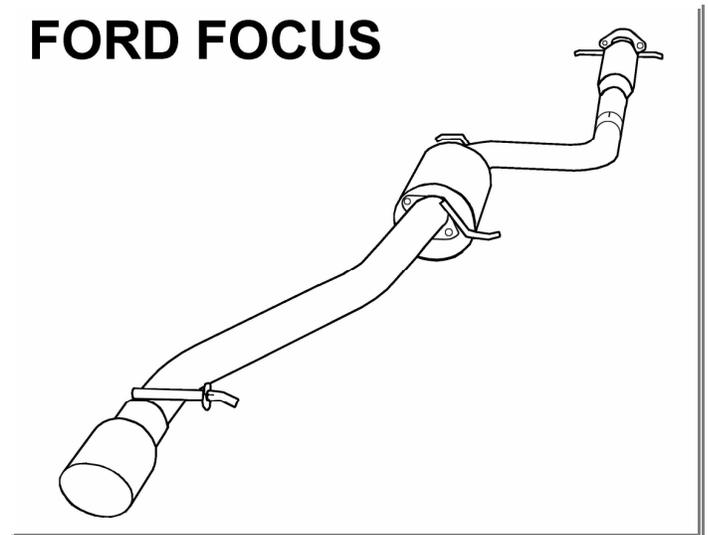

MBRP Inc. Recommends that all exhaust systems and accessories be installed by a trained automotive technician. If these parts are to be installed by a do-it-yourself person, or end user, please take all necessary precautions to ensure a safe installation.