


S5138

2006-2008 DODGE MEGA CAB 1500,
5.7L HEMI, CAT BACK 3 1/2" DUAL
SPLIT SIDE

MBRP

INC.

PERFORMANCE EXHAUST

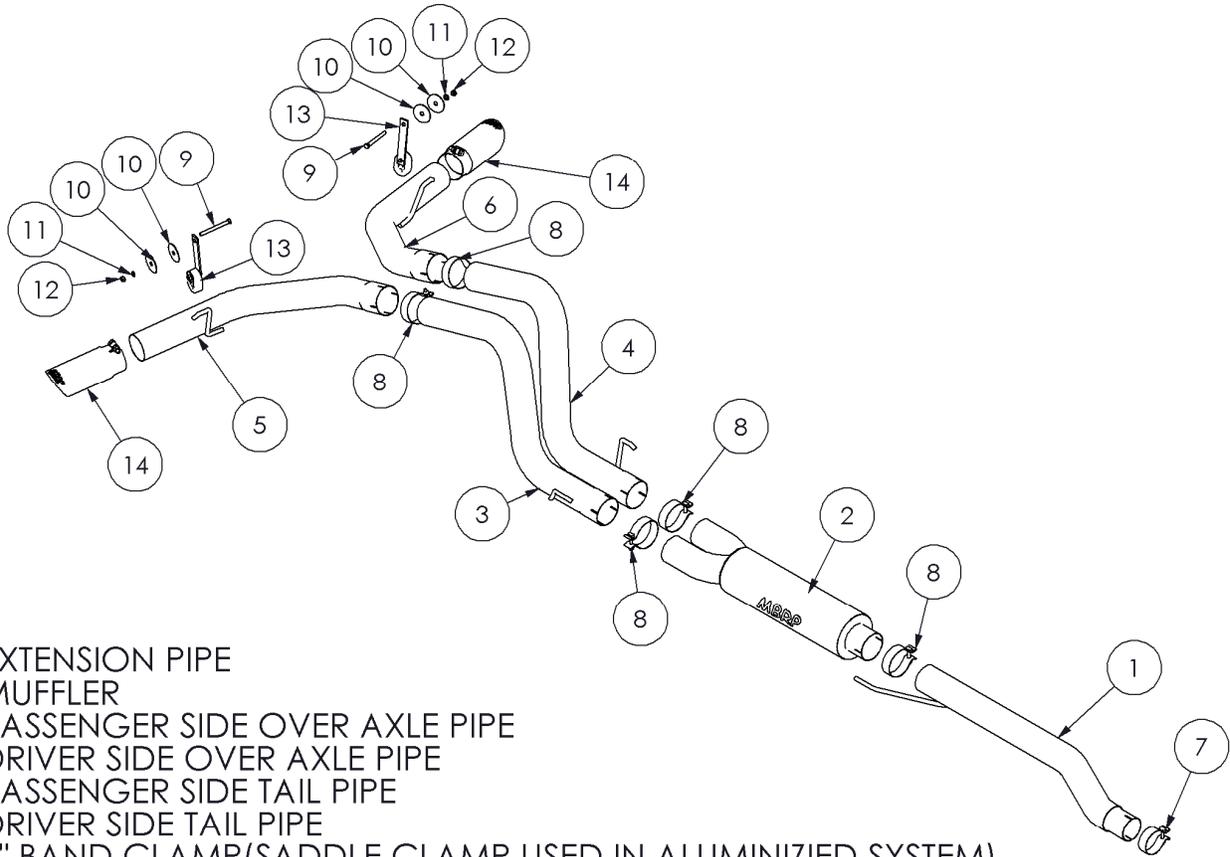

1. EXTENSION PIPE
2. MUFFLER
3. PASSENGER SIDE OVER AXLE PIPE
4. DRIVER SIDE OVER AXLE PIPE
5. PASSENGER SIDE TAIL PIPE
6. DRIVER SIDE TAIL PIPE
7. 3" BAND CLAMP(SADDLE CLAMP USED IN ALUMINIZED SYSTEM)
8. 3 1/2" BAND CLAMP (SADDLE CLAMP USED IN ALUMINIZED SYSTEM) (5PCS)
9. HEX BOLT (2PCS)
10. FENDER WASHER (4PCS)
11. LOCK WASHER (2PCS)
12. HEX NUT (2PCS)
13. HANGER ASSEMBLY(2PCS)
14. EXHAUST TIP (2PCS)

PLEASE READ BEFORE STARTING INSTALATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

2006-2008 Dodge Ram 1500 Mega Cab
5.7L HEMI

Note: Spare tire will need to be relocated.

Removal of stock system:



Figure 1



Figure 2



Figure 3



Figure 4

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
2. Remove clamp just after the Y pipe. **Refer to Figure 1.**
3. Remove clamp from the rear of the muffler. **Refer to Figure 2.**
4. Remove the stock exhaust from the existing hangers and remove the system from the vehicle.

Installation of MBRP Inc. Performance Exhaust:

1. Install **Extension Pipe** over the existing Y using the **3" Clamp** and the use existing rubber insulator. Leave the **3" Clamp** loose enough for adjustment. **Refer to Figure 3.**
2. Slide a **3 1/2" Clamp** over the **Extension Pipe** and install the **Muffler** onto the **Extension Pipe**. **Refer to Figure 4.**



Figure 5



Figure 6



Figure 7



Figure 8

3. Slide two **3 ½” Clamps** over the outlets of the **Muffler**. Position the **Driver Side Over Axle Pipe** over the axle and loosely attach it to the **Muffler**. Install the **Driver Side Over Axle Pipe** hanger into the factory rubber insulator. Repeat these steps for the **Passenger Side Over Axle Pipe**. Refer to **Figure 5**.

4. Slide a **3 ½” Band Clamp** over the **Driver Side Tail Pipe** and install onto the **Driver Side Over Axle Pipe**. Attach the **Hanger Assembly** to the frame using the fasteners provided. Insert the **Driver Side Tail Pipe** hanger into the rubber insulator. Refer to **Figure 6**.

5. Repeat step 4. for the **Passenger Side Tail Pipe**. Refer to **Figure 7**.

6. Install and adjust the **Exhaust Tips** to suit. Using a 17mm wrench tighten the lock bolt located on the **Exhaust Tips**. Refer to **Figure 8**.

7. Align the exhaust as required. Starting at the front of the exhaust, tighten all clamps and connections.

8. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines or any wiring. If any interference is detected relocate or adjust.



Congratulations! You are ready to begin experiencing the improved power, sound and driving experience of your MBRP Inc. performance exhaust system. We are certain you will enjoy your purchase.