


While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown in illustration on page 2 are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed.
- that you have read and understand these instructions.

If you have any questions or uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

Installation Instructions for Systems; S6016304, S6016409, S6016AL

2006 Chev/GMC 6.6L Duramax Diesel Regular Cab Long Box 137" Wheelbase

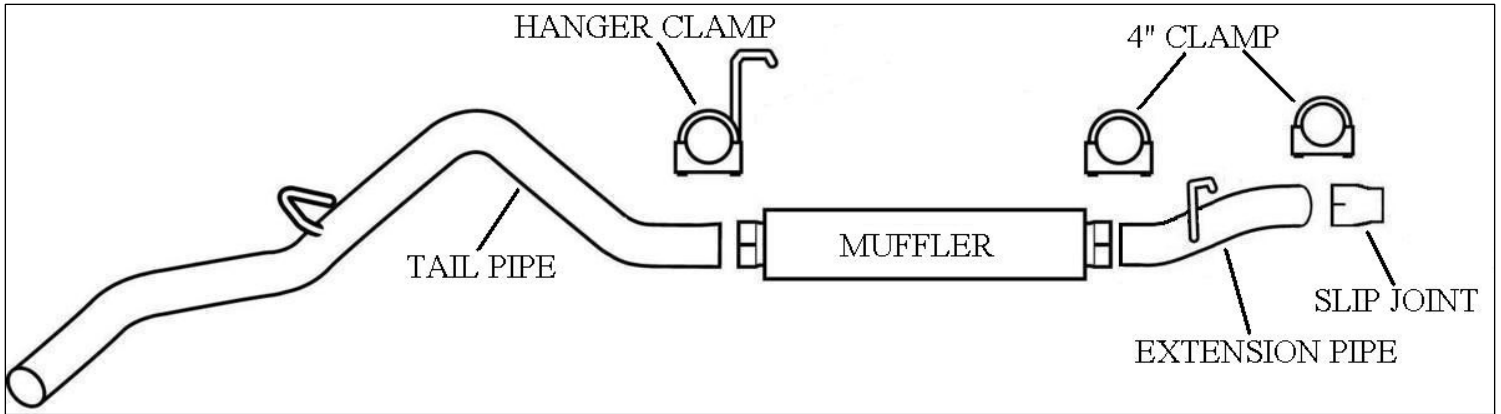

S6016304 "PRO SERIES"

- 1 PC - 4" Tail pipe
- 1 PC - High Flow Muffler
- 1 PC - 4" Extension pipe
- 1 PC - Slip Joint
- 2 PCs - 4" Clamps
- 1 PC - Hanger Clamp
- 1 PC - 5" Stainless Steel Tip

S6016409 "XP SERIES"
S6016AL "Installer SERIES"

- 1 PC - 4" Tail pipe
- 1 PC - High Flow Muffler
- 1 PC - 4" Extension pipe
- 1 PC - Slip Joint
- 2 PCs - 4" Clamps
- 1 PC - Hanger Clamp
- Tip Sold Separately**

Removal of Stock System:

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
2. Loosen the band clamp located behind the catalytic converter and disconnect the factory exhaust system.
3. Remove the exhaust system from the rubber insulators and remove from under the vehicle. If a hoist is not available for use, it may be necessary to cut the tail pipe behind the muffler for removal of the system.

Installation of MBRP Inc. Performance Exhaust:



Figure 1

1. Place the **Slip Joint** provided into the factory band clamp located behind the catalytic converter. Install the **Extension Pipe** into the **Slip Joint** and place the hanger into the factory rubber insulator. Refer to Figure 1.



Figure 2

2. Install the **Muffler** onto the **Extension Pipe**. Refer to Figure 2.

Refer to Figure 3 for the proper direction of air flow through the **Muffler**.



Figure 3



Figure 4

3. Install the **Tail Pipe** from the rear of the truck, over the axle and attach to the **Muffler Outlet**. Install the tail pipe hanger into the OEM hanger, adjust for best axle clearance and **Tail Pipe** exit to complete. Refer to Figure 4.



Figure 5

4. Install the **Hanger Clamp** at the connection between the **Muffler** and the **Tail Pipe** and into the OEM rubber hanger at this position. Refer to Figure 5.

5. Install the provided clamps around pipes where needed. Adjust the tail pipe and check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines or any wiring. If any interference is detected relocate or adjust.
6. Make sure the exhaust is in place before tightening clamps. Start at the front of the exhaust system and begin tightening all connections.
7. Install and adjust **Tip** to suit. Using a 17mm wrench, tighten lock bolt located on **Tip**. **A Tip is not included with "INSTALLER" or "XP SERIES" kits.** Tips may be purchased separately, check with your dealer.

Congratulations! You are ready to begin enjoying the improved performance and driving experience of your MBRP Inc. performance exhaust system. We hope you enjoy your purchase.