


S7106

2009-10 DODGE CHALLENGER 3.5L V6
CAT BACK, SINGLE

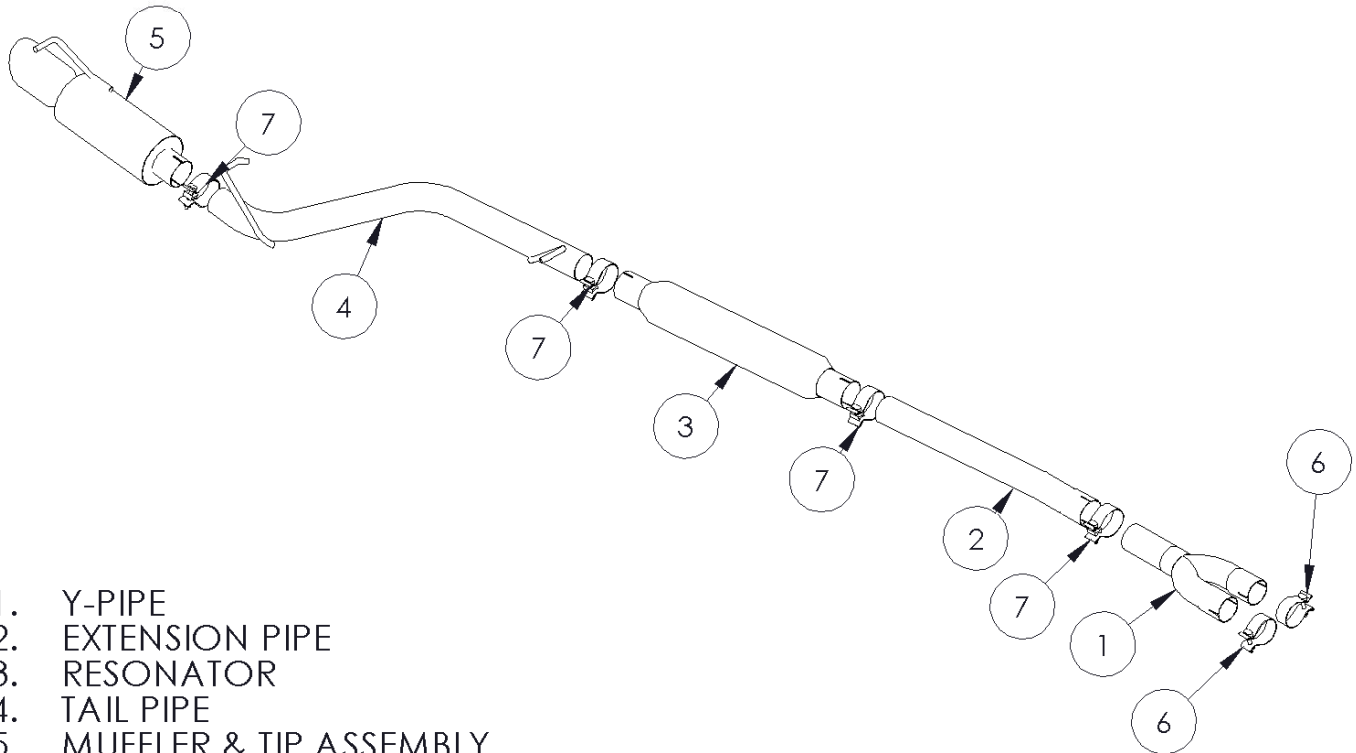

1. Y-PIPE
2. EXTENSION PIPE
3. RESONATOR
4. TAIL PIPE
5. MUFFLER & TIP ASSEMBLY
6. 2 1/4" BAND CLAMP (2PCS)
7. 2 1/2" BAND CLAMP (4PCS)

NOTE: SADDLE CLAMPS ARE USED IN ALUMINIZED SYSTEMS

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

2009-2010 DODGE CHALLENGER 3.5L V6

Removal of stock system:



Figure 1



Figure 2



Figure 3



Figure 4

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.

2 Remove the rubber exhaust from the rubber insulators. **Refer to Figure 1.**

3. Loosen the band clamps on the factory exhaust located in front of the Y-pipe. **Refer to Figure 2.**

4. Remove the exhaust from the remaining rubber insulators. **Refer to Figure 3.**

5. Remove the exhaust from the vehicle. **Refer to Figure 4.**

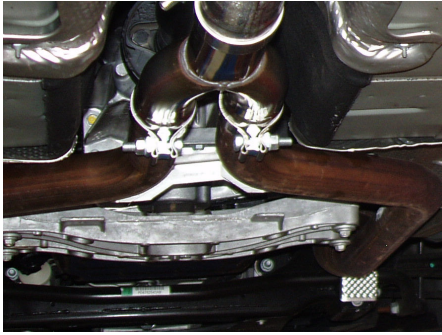


Figure 5

Installation of MBRP Inc. Performance Exhaust:

1. Slide two **2 ¼” Band Clamps** over the remaining factory exhaust pipes. Install the **Y- Pipe** using the **2 ¼” Band Clamps** leaving them loose enough for some adjustment.

Refer to Figure 5.

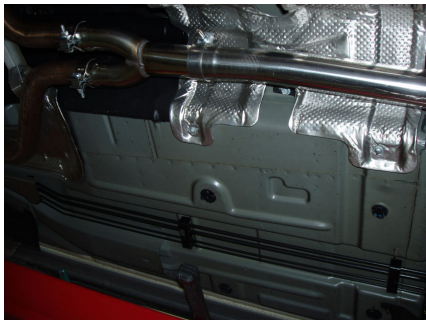


Figure 6

2. Slide a **2 ½” Band Clamp** over the **Y-Pipe** and install the **Extension Pipe**. The bend in the **Extension Pipe** should be directed towards the passenger side of the vehicle.

Refer to Figure 6.

3. Slide a **2 ½” Band Clamp** over the **Extension Pipe** and install the **Resonator**. **Refer to Figure 7.**



Figure 7

4. Slide a **2 ½” Band Clamp** over the **Resonator** and slide the appropriate end of the **Tail Pipe**, into the **Resonator**. Install the **Tail Pipe** hangers to the existing rubber insulators. **Refer to Figure 8.**

5. Using the remaining **2 ½” Band Clamp** install the **Muffler & Tip Assembly** to the **Tail Pipe**. Insert the hanger on the **Muffler & Tip Assembly** into the existing rubber insulator. **Refer to Figure 9.**

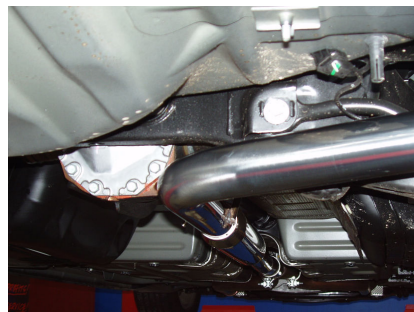


Figure 8

6. Align the exhaust as required. Starting at the **Muffler & Tip Assembly** of the exhaust, tighten all clamps and connections. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the fuel and brake lines or any wiring. If any interference is detected relocate or adjust.



Figure 9



Congratulations! You are ready to begin experiencing the improved power, sound and driving experience of your MBRP Inc. performance exhaust system. We know you will enjoy your purchase.