


IC2202

3" INTERCOOLER INLET PIPE
2013-2014 6.7L DODGE CUMMINS

MBRP INC.
PERFORMANCE EXHAUST

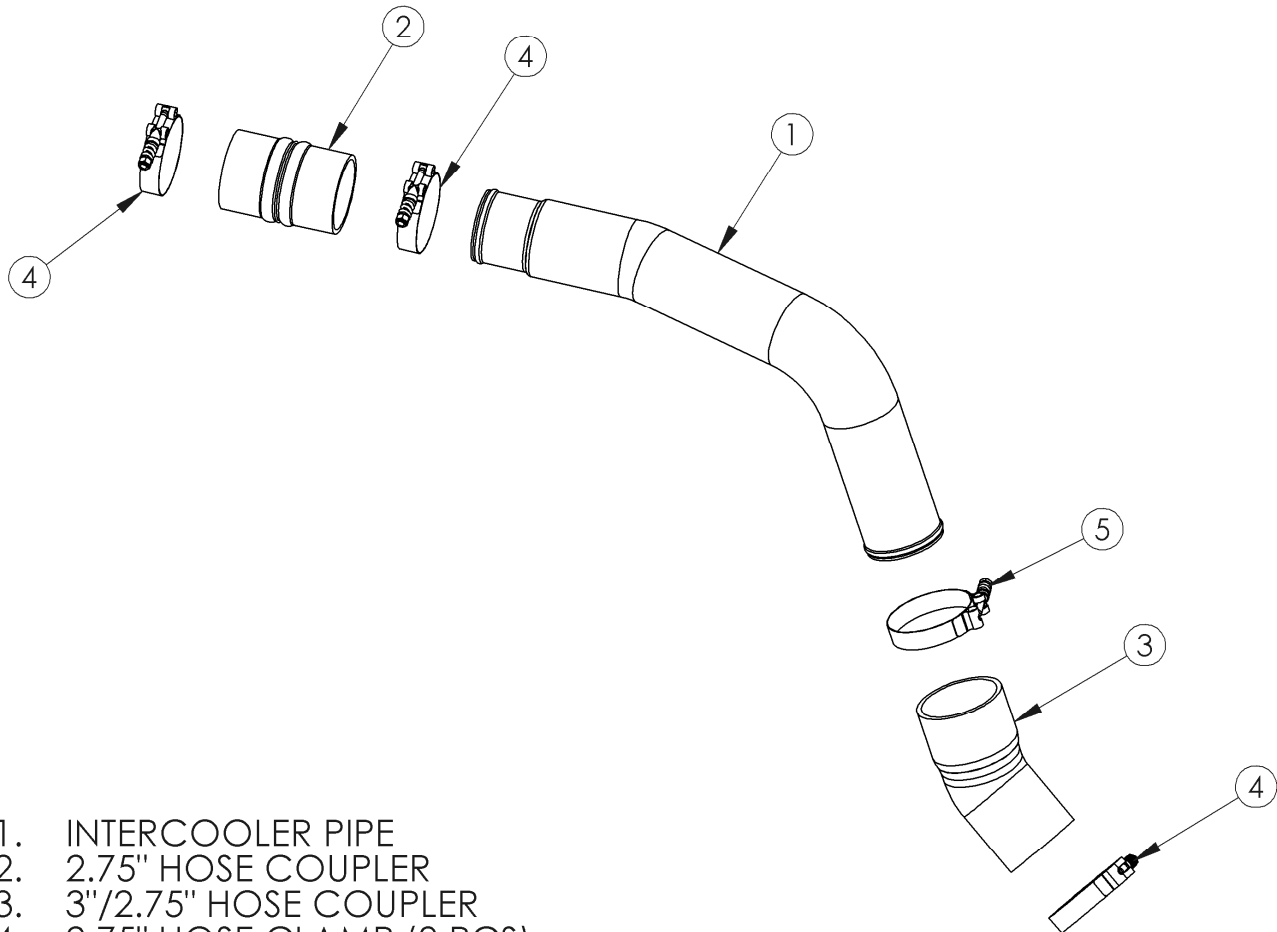

1. INTERCOOLER PIPE
2. 2.75" HOSE COUPLER
3. 3"/2.75" HOSE COUPLER
4. 2.75" HOSE CLAMP (3 PCS)
5. 3" HOSE CLAMP

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this product are of superior quality and properly packaged it is the installer's responsibility to ensure the following before removal of the factory components:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the product you have purchased is appropriate for your vehicle year, model and configuration.
- that the product will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this product to your vehicle please contact your dealer before commencing installation.

Removal of Stock Pipe:



Figure 1

1. Remove the Passenger side wheel liner. Retain all hardware.
2. Remove the air intake filter.
3. Remove the hardware securing the intake filter compartment and then remove the compartment to access the intercooler inlet tube.

Refer to Figure 1.

4. Remove the intake tube from the turbo inlet to access the stock hose on the turbo outlet. **Refer to Figure 2.**



Figure 2

5. Using an 11mm deep socket, loosen the clamps securing the hose couplers to the intercooler inlet and turbo outlet.

6. Remove the stock intercooler pipe.

Installation of MBRP Inc. Intercooler Pipe:

NOTE: PLEASE ENSURE THE INSIDE OF THE INTERCOOLER PIPE IS CLEAN BEFORE INSTALLATION.



Figure 3

1. Place one of **2.75" Hose Clamps** around the turbo and install the **2.75" Hose Coupler** onto the turbo outlet by sliding it over the outlet and under the hose clamp. Do not fully tighten the clamp yet.

2. Place another **2.75" Hose Clamp** around the intercooler inlet and install the 30-degree **3"/ 2.75" Hose Coupler** by sliding the 2.75" end over the inlet and under the hose clamp. Do not fully tighten the clamp yet.

Refer to Figure 3.

3. Install the **Intercooler Pipe** it by inserting each end into the appropriate connecting hose with the remaining **3" Hose Clamp** and the **2.75" Hose Clamp** over each hose.

4. Position the **Intercooler Pipe** and hoses to maximize clearances, and then tighten all clamps to 75 in-lbs. **Refer to Figure 4.**

5. Replace the air intake, filter compartment, and air filter. Replace the wheel liner.



Figure 4

Congratulations! You are ready to begin experiencing the improved power and driving excitement of your MBRP Inc. intercooler pipe upgrade. We know you will enjoy your purchase.