


S5236P

11-14 FORD F150, 3.5L ECOBOOST, REGULAR (6.5' & 8' BOX)/EXTENDED (NOT 8' BOX)/CREW CAB,

MBRP

10-Dec-19

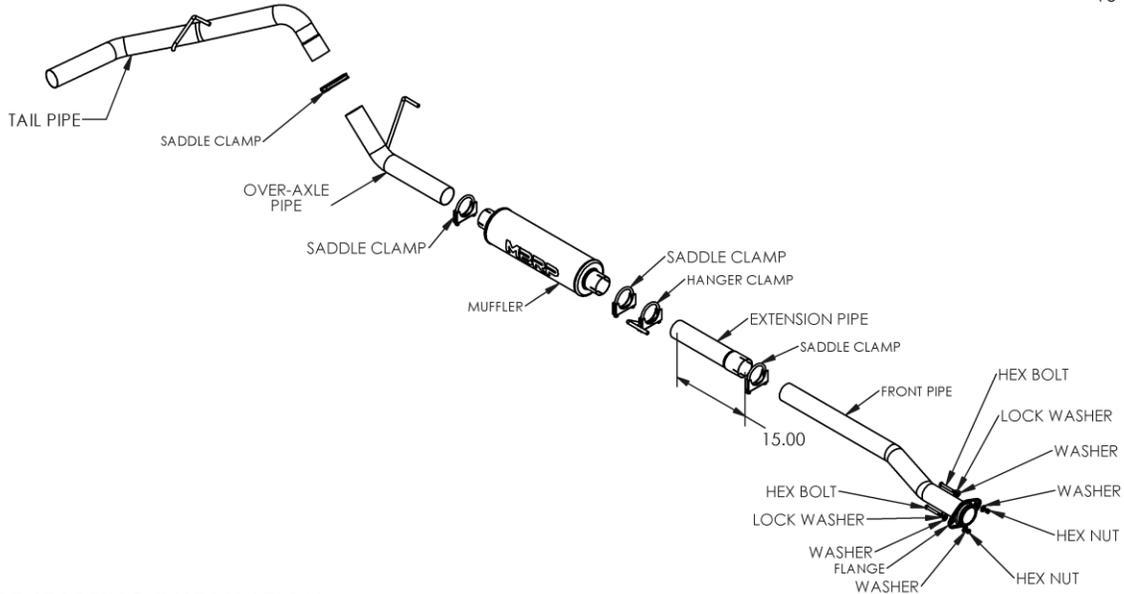

PLEASE READ BEFORE STARTING INSTALLATION

MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged. It is the installer's responsibility to ensure that all components are present and fit together as shown. Please also ensure that all components are undamaged before removal of the factory exhaust. Finally, check that this system properly matches the make and model of the vehicle and will not interfere with previous or planned modifications.

Removal of stock system:

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
2. Loosen the flange nuts located behind the "Y" pipe.
3. Loosen the clamp located in front of the muffler.
4. Remove the hangers from the rubber insulators and remove the exhaust from the vehicle. If a hoist or hydraulic lift is not being used the tail pipe may need to be cut to clear the rear axle.

Installation of MBRP Performance Exhaust:

1. Cut the **Front Pipe** for the following models: **Regular Cab 6.5' box = 19"**, **Super Cab 5.5' box = 11"**. **All other models DO NOT require the front pipe to be cut.** Install the **Flange** onto the **Front Pipe**. Install the **Front Pipe** to the existing flange using the fasteners provided. Note; the **Extension Pipe** is only required on the **Super Crew 6.5' box**.
2. Slide a **3" Clamp** over the **Front Pipe** and install the **Extension Pipe** onto the **Front Pipe**. Install the **Hanger Clamp** to the **Extension Pipe** (or **Front Pipe** if the **Extension Pipe** is not required) and place the hanger into the existing rubber insulator.
3. Slide the **Muffler** onto the **Extension Pipe** or **Front Pipe** as required.
4. Loosely install the **Over Axle Pipe** connecting it to the **Muffler** outlet using a **3" Clamp**. Install the hanger into the rubber insulator located above the **Over Axle Pipe**.
5. Attach the expanded end of the **Tail Pipe** to the **Over Axle Pipe** using a **3" Clamp**. Slide the **Tail Pipe** hanger into the factory rubber insulator.
6. Align the exhaust as required. Starting at the front of the exhaust tighten all clamps and connections.
7. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines or any wiring. If any interference is detected relocate or adjust.

Congratulations! You are ready to begin enjoying the improved performance and driving experience of your **MBRP** Performance Exhaust system. We hope you enjoy your purchase.