


S6100

98.5-02 DODGE 2500/3500
5.9L CUMMINS, TURBO BACK,
4" SINGLE SIDE

MBRP

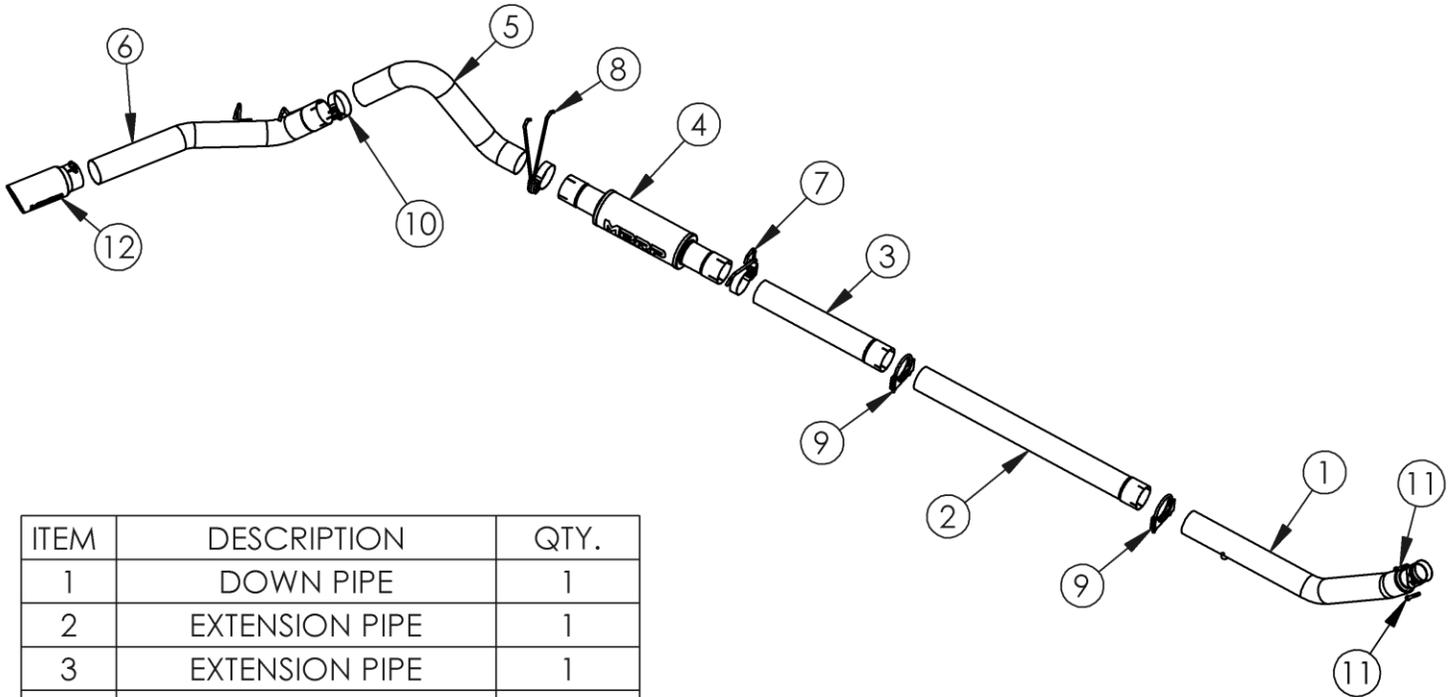

ITEM	DESCRIPTION	QTY.
1	DOWN PIPE	1
2	EXTENSION PIPE	1
3	EXTENSION PIPE	1
4	MUFFLER	1
5	OVER-AXLE PIPE	1
6	TAIL PIPE	1
7	4" HANGER CLAMP	1
8	4" HANGER CLAMP	1
9	4" CLAMP	2
10	4" BAND CLAMP	1
11	M10 X 60MM BOLT	2
12	EXHAUST TIP	1

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

MBRP

Removal of Stock System:



Figure 1

1. Separate the stock exhaust system at the slip joint by the muffler. Remove the rear exhaust from the rubber hangers and remove the system from under the truck.
2. Using a socket or wrench, remove the two bolts at the turbo flange and remove the stock down pipe.

Installation of MBRP Performance Exhaust:



Figure 2

1. Install the **Down Pipe** starting from behind the cross member and place it in the same position as the stock down pipe. Place the hanger into the OEM rubber insulator and attaching the flared end to the turbo using the supplied **M10 x 60mm Bolts**. Do not fully tighten until all components are in place.
Refer to Figures 1 & 2.
2. Install the **42" Extension Pipe** over the **Down Pipe** using a **4" Clamp**. The **42" Extension Pipe** may require cutting to accommodate vehicles other than the Quad Cab long bed. (**Installation tip:** Temporarily hang the **Muffler** and the **4" Hanger Clamp** in place using the two OEM rubber hangers and measure from the **Muffler** to the **Down Pipe** to determine the length required.)
Refer to Figure 3.



Figure 3

MBRP



Figure 4



Figure 5



Figure 6



Figure 7

3. Slide the **4" Hanger Clamp** over the inlet of the **Muffler**. Then install the **Muffler** over the **Extension Pipe** and place the **4" Hanger Clamp** into the OEM rubber hangers above the inlet. (Muffler orientation: Louver openings should face the rear of the vehicle).
Refer to Figures 4 & 5.
4. Slide remaining **4" Hanger Clamp** over the outlet of the Muffler and place the **4" Hanger Clamp** hanger into the OEM rubber hangers above the outlet.
5. Install the **Tail Pipe** and **4" Band Clamp** onto the **Over- Axle Pipe**. from the rear of the truck, Slide the assembly over the axle and attach to the outlet of the **Muffler**. Install Tail Pipe hangers into the OEM rubber hangers. (Note: 94-97 12 valve trucks may require rear hanger fabrication. Option: order a Rear Hanger Assembly HG6100)
6. Install the remaining **Clamps** around the pipes where needed. Do not tighten the **Clamps** yet.
7. Install and adjust the **Exhaust Tip** to suit. Using a wrench tighten the lock bolt located on the **Exhaust Tip**.
Refer to Figure 7.
8. Align the **Tail Pipe** and tighten the **Clamps** starting at the front and work rearward to secure the system.
9. Check along the full length of the exhaust to ensure there is adequate clearance for fuel lines, brake lines and any wiring, etc. If any interference is detected, relocate or adjust.

Congratulations! You are ready to begin experiencing the improved power, sound and driving excitement of your **MBRP** performance exhaust system. We are certain that you will enjoy your purchase.