


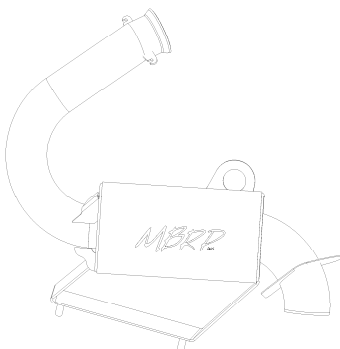

MBRP Muffler Installation Instructions

2220210 / 222T209	05-2011 M6/ M7 07-08 Crossfire 600
2220210 / 222T209	05-09 M8 & Crossfire 800
2250110 / 225T109	07-2011 M1000 Crossfire 1000
2250110 / 225T109	10-11 M8HO Crossfire 800HO
2240210	07-09 F1000

1. Remove springs securing stock muffler. (place springs safely aside so they can be reused)
2. Remove stock muffler from belly pan.
3. Remove any rubber bushings from stock muffler and transfer onto MBRP muffler.
4. Install MBRP muffler in the same location as the original equipment, using the stock springs and bushings to secure it in all provided locations.



NOTE: To avoid exhaust leaks use high heat silicone to seal all connections between expansion chambers and muffler. Monitor for leaks during the first 200 miles after your installation and re-apply silicone where necessary. We suggest having your local snowmobile mechanic or performance shop install this product.

CAUTION: **DO NOT** touch muffler while snowmobile is running or shortly after it has run, as it may result in personal injury.

MBRP Inc warranty applies for a one (1) year period from the date of purchase to defects in product material and workmanship and is to the original purchaser on record and for the original vehicle for which it was designed and installed. This warranty is limited, at MBRP Inc.'s sole determination, to the repair or replacement of defective product only and does not include the cost of removal or re-installation, damage by accident, abuse, misuse or misapplication or any consequential damages however they may arise. Determination of warranty coverage shall be at the discretion of an authorized MBRP Inc quality engineer.