




MBRP Muffler Installation Instructions

2271017

09-2011 Z1Turbo

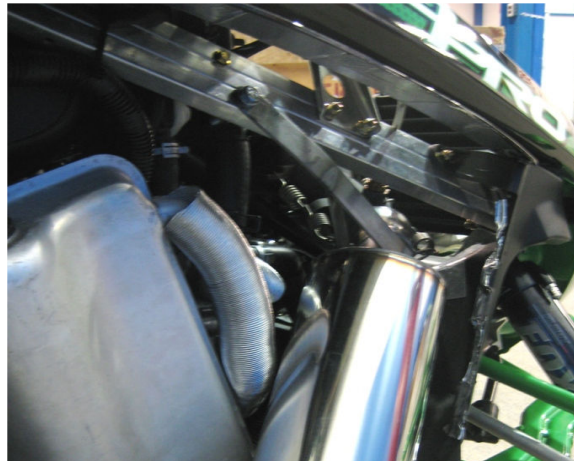

1. Remove springs and mounting bracket securing stock muffler. (place springs and bracket safely aside so they can be reused) Pictured above is the bracket that must be removed for installation of your MBRP muffler.
2. Remove stock muffler from belly pan.
3. Using the provided heat tape wrap the main oil line (pictured) for added protection.
4. Install MBRP muffler in the same location as the original equipment, using the stock springs and bracket to secure it in all provided locations. Use the provided 8mm bolt and washers to properly space the stock bracket from the MBRP muffler.
5. Tighten all fasteners and ensure springs are securely mounted

NOTE: To avoid exhaust leaks use high heat silicone to seal all connections between expansion chambers and muffler. Monitor for leaks during the first 200 miles after your installation and re-apply silicone where necessary. We suggest having your local snowmobile mechanic or performance shop install this product.

CAUTION: **DO NOT** touch muffler while snowmobile is running or shortly after it has run, as it may result in personal injury.

MBRP Inc warranty applies for a one (1) year period from the date of purchase to defects in product material and workmanship and is to the original purchaser on record and for the original vehicle for which it was designed and installed. This warranty is limited, at MBRP Inc.'s sole determination, to the repair or replacement of defective product only and does not include the cost of removal or re-installation, damage by accident, abuse, misuse or misapplication or any consequential damages however they may arise. Determination of warranty coverage shall be at the discretion of an authorized MBRP Inc quality engineer.