




## **MBRP Muffler Installation Instructions**

**315T405**

**2011-2012 APEX (All Models)**

1. REMOVAL OF SEAT:
  - a. Open flap into storage area at rear of seat and un bolt the seat
  - b. Unplug tail light clip on right side of fuel tank and remove tail like housing.
  - c. Lift seat off machine
2. Remove 4 bolts on muffler shield and lift off.
3. Remove black plug and loosen muffler clamp
4. Remove the 4 muffler mounting bolts and pull stock muffler off.
5. Transfer grommets from stock muffler onto MBRP muffler.
6. Apply high temp silicone on inlet of MBRP muffler and install with Barrel clamp
7. Follow instructions 1-4 in reverse to complete installation.

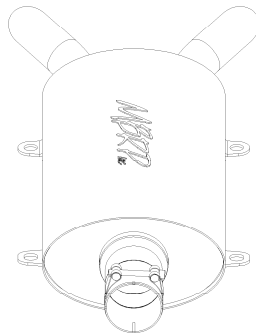

NOTE: To avoid exhaust leaks use high heat silicone to seal all connections between expansion chambers and muffler. Monitor for leaks during the first 200 miles after your installation and re-apply silicone where necessary. We suggest having your local snowmobile mechanic or performance shop install this product.

CAUTION: **DO NOT** touch muffler while snowmobile is running or shortly after it has run, as it may result in personal injury.

MBRP Inc warranty applies for a one (1) year period from the date of purchase to defects in product material and workmanship and is to the original purchaser on record and for the original vehicle for which it was designed and installed. This warranty is limited, at MBRP Inc.'s sole determination, to the repair or replacement of defective product only and does not include the cost of removal or re-installation, damage by accident, abuse, misuse or misapplication or any consequential damages however they may arise. Determination of warranty coverage shall be at the discretion of an authorized MBRP Inc quality engineer.