


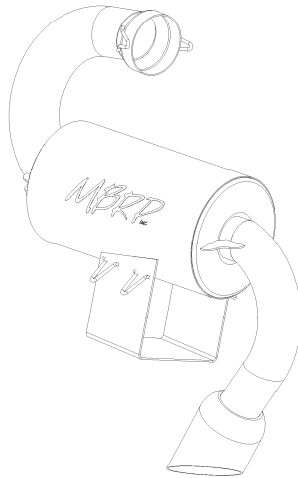

MBRP Muffler Installation Instructions

| | |
|------------------------------|---|
| 4220210 & 422T209 | 2006- 600HO Fusion |
| 4220210 & 422T209 | 07-10 600-700 /Dragon / RMK / Switchback / Shift |
| 4220210 & 422T209 | 2010 800 Dragon /RMK/Switchback / Shift |
| 4200210 | 08-09 800 Dragon / RMK / IQ |

1. Remove springs fastening stock muffler to frame and exhaust pipe. (Set springs safely aside so they can be reused)
2. Remove stock muffler.
3. Install MBRP muffler, placing its outlet through the stock exit in the belly pan.
4. Using stock springs, fasten the MBRP muffler using tabs on inlet pipe and support bracket. **Note:** We suggest tying back your coolant hose to avoid it resting on the muffler.



NOTE: To avoid exhaust leaks use high heat silicone to seal all connections between expansion chambers and muffler. Monitor for leaks during the first 200 miles after your installation and re-apply silicone where necessary. We suggest having your local snowmobile mechanic or performance shop install this product.

CAUTION: **DO NOT** touch muffler while snowmobile is running or shortly after it has run, as it may result in personal injury.

MBRP Inc warranty applies for a one (1) year period from the date of purchase to defects in product material and workmanship and is to the original purchaser on record and for the original vehicle for which it was designed and installed. This warranty is limited, at MBRP Inc.'s sole determination, to the repair or replacement of defective product only and does not include the cost of removal or re-installation, damage by accident, abuse, misuse or misapplication or any consequential damages however they may arise. Determination of warranty coverage shall be at the discretion of an authorized MBRP Inc quality engineer.